



Vintage Vibes.
Modern Moves.

DISC
WIRELESS SPEAKER

User Manual

Un-boxing the Device

- Disc Wireless Speaker
- Type-C Charging Cable
- User Manual

Specifications

Model Name	Pebble Disc
Model No	PBS111
Speaker Output	8W
Play Time	Up to 4 hours (@50% Volume)
Bluetooth	V5.3
Charging Time	Up to 3 hours
Working Range	Up to 10m
Charging Port	Type-C
Battery	1200mAh

How to Operate



(1) Pole

Slide left to turn on, slide right to turn off
Pairing name: **PBL Disc**

(2) Mode/Clock Button

Short press to switch between available modes: BT / TF (microSD) AUX.

For Alarm Function:

Clock 1:

Long press the (1) button then short, press the (2) button, the hour will be flashing. Then rotating the (2) button to select the time you want to set. Then short, press the (2) button to enter minute setting, the minute will be flashing. Then rotating the (2) button to select the time you want to set. Short press (2) button the display will show off/on, rotating the (2) button to turn the clock on/off. Short press (2) button to enter the ring select mode, rotating the (2) button to select the ring you want. Short press (2) button to complete the clock 1 setting.

clock 2:

After clock 1 setting, the hour will be flashing. Then rotating the (2) button to select the time you want to set. Then short press the (2) button to enter minute setting, the minute will be flashing. Then rotating the (2) button to select the time you want to set. Short press (2) button the display will show off/on, rotating the (2) button to turn the clock on/off. Short press (2) button to enter the ring select mode, rotating the (2) button to select the ring you want. Short press (2) button to complete the clock 2 setting.

(3) +Volume Up/-Volume Down/Play/Pause Button

Left and right swipe buttons to adjust volume level. Short press to pause or play the music.

(5) Charging indicator light

The charging indicator light will always be red: the speaker is being recharged. Once it is fully charged the indicator light will be off. Do not overcharge.

(6) Charging Port

Turn off the unit before charging. Connect the small end of the Type-C charging cable (included) to the Type-C port and connect the larger end of the cable to your computer's USB port or an AC Adaptor (not included) to charge the speaker. The red light will be on while charging. Once it is fully charged the red light will be off.

(7) MicroSD Card Port

Insert microSD card to play compatible audio.

(8) AUX Port

Insert AUX device to play compatible audio.

Note:

Only MP3 format files are compatible. Maximum size of the USB/ micro SD device that can be connected is 32GB.

TWS function (Optional, requires two speakers)

If you have two speakers (Model: **Pebble Disc**), you can use them together for a more immersive audio experience.

- Place the two speakers in the same room and turn them on in Bluetooth mode. Do not connect them to your audio source device at this stage
- Long press the '**Play/Pause**' button on either speaker. The two speakers will now connect in TWS mode.
- Enable Bluetooth function on your audio source device like a smartphone or tablet; navigate to the Bluetooth setting menu and search for the Bluetooth name '**PBL Disc**'. In TWS mode, only one Bluetooth name will be displayed.

Note: To disconnect TWS mode, long press the '**Play/Pause**' button again.

DO'S AND DON'TS

Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.

Safety Precaution

- Do not expose the battery to excessive heat such as sunlight.
- Do not use this product in the water.
- Do not dispose of the device in a fire because this will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged
- Only use attachments/accessories specified by the manufacturer

Thank You

Hi There

Thank you for choosing **Pebble!**

You are now the proud owner of **Pebble Disc** Wireless Speaker

The Wireless Speaker is crafted to give you a great listening experience. It is not just a speaker, but a way of living and a lifestyle statement. Now enjoy the highs & lows with complete clarity.

This **Pebble Disc** is a genuine high-quality Pebble product that comes with **6 Months Warranty**.

For Availing Warranty

Contact us at- <https://support.pebblecart.com/support/tickets/new> and Service Centres near you

Call on +91 8800271651 or email at support@pebblecart.com



Scan & register your product for **6 Months Warranty**