




pebble

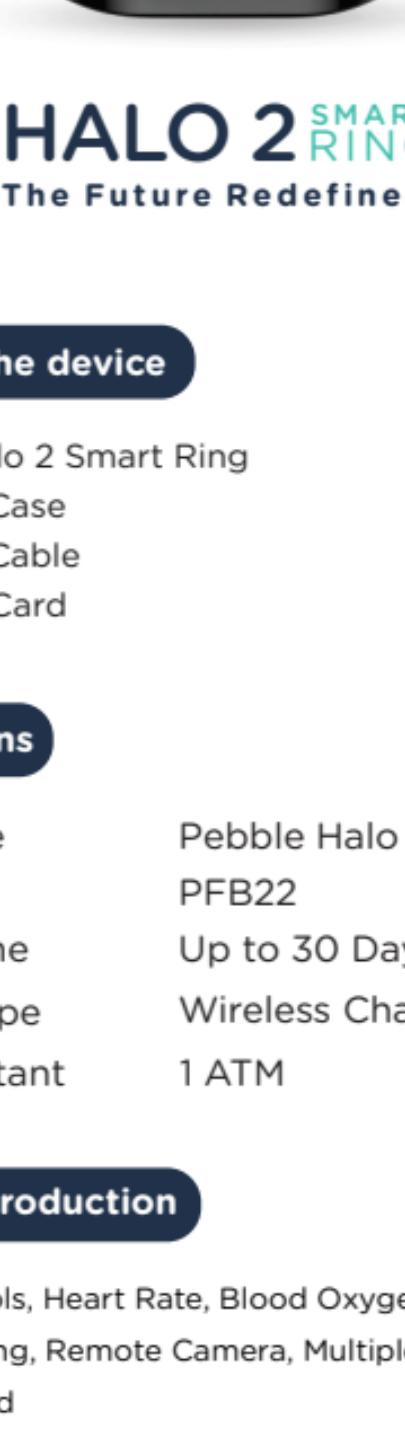

HALO 2 SMART RING

The Future Redefined.

Un-boxing the device


- Pebble Halo 2 Smart Ring
- Charging Case
- Charging Cable
- Warranty Card

Specifications

Model Name	Pebble Halo 2
Model No.	PFB22
Standby Time	Up to 30 Days (with case)
Charging Type	Wireless Charging
Water Resistant	1 ATM


Function Introduction

Gesture Controls, Heart Rate, Blood Oxygen, Sleep Monitoring, Remote Camera, Multiple Sports Modes, Exercise Record

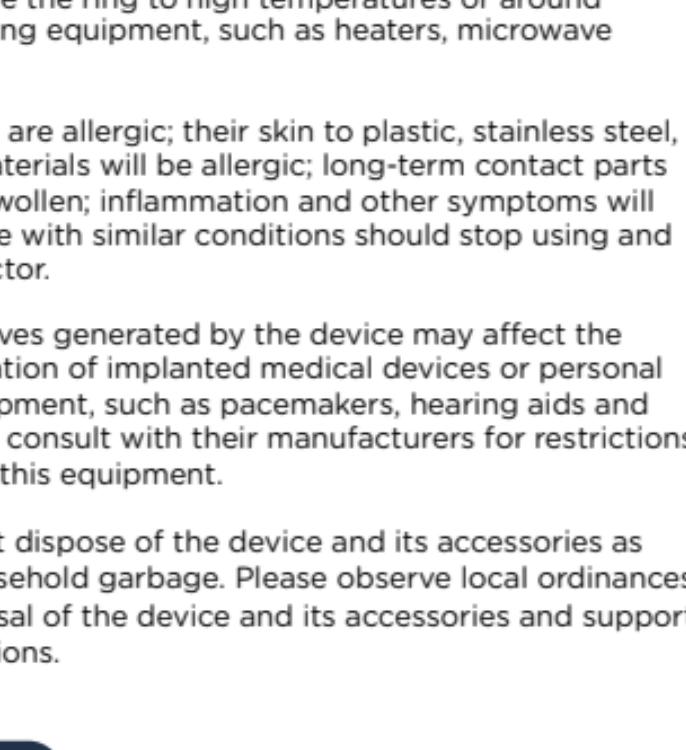


Connection

1. Scan the QR code to download the APP in the Apple Store or Google Play Store.

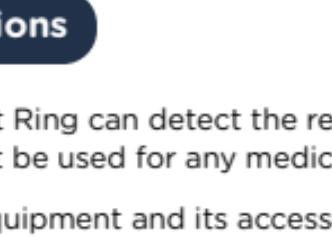

2. Connect the ring to the charging case, and it will be activated automatically.

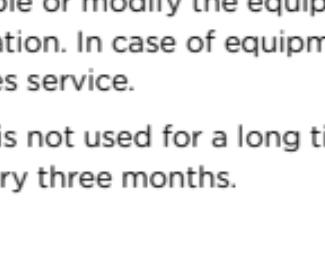

3. Open the APP to Bind the Ring.



4. When the ring appears in the Bluetooth list, choose it to start binding.

5. Wait for seconds, the APP will automatically connect and bind the ring. During binding, the ring will flash LED light for 5 seconds.

6. If you need to unbind it, click "Unbind Ring" on the setting window of the APP to finish unbinding. If you're using an iPhone, you'll also need to manually remove or ignore your ring from the list of paired Bluetooth devices in your phone's Bluetooth setting.

How to Wear Smart Ring

Wear the ring on your suitable finger and choose a comfortable size. Suggest wear it on the index finger for better monitoring of data.

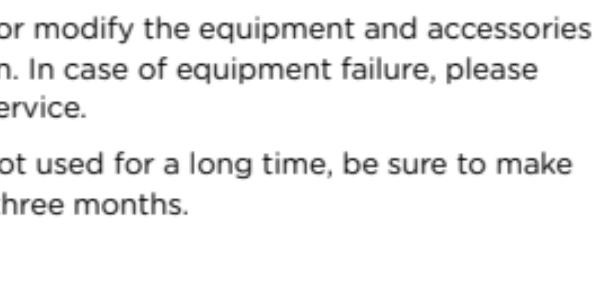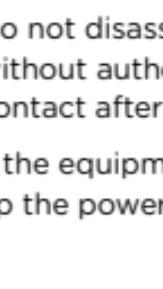

* Please let the sensor on the inside of your fingers for more accurate measurement of heart rate and blood oxygen when wearing it.

Safety & Precautions

1. The ring comes with built in battery, and the battery is not replaceable, do not disassemble or modify the battery.

2. Do not expose the ring to high temperatures or around heat generating equipment, such as heaters, microwave ovens, etc.

3. Some people are allergic; their skin to plastic, stainless steel, and other materials will be allergic; long-term contact parts will be red, swollen; inflammation and other symptoms will occur; anyone with similar conditions should stop using and consult a doctor.

4. The radio waves generated by the device may affect the normal operation of implanted medical devices or personal medical equipment, such as pacemakers, hearing aids and so on. Please consult with their manufacturers for restrictions on the use of this equipment.

5. Please do not dispose of the device and its accessories as ordinary household garbage. Please observe local ordinances for the disposal of the device and its accessories and support recycling actions.

Maintenance

1. Regularly clean your wrist, especially after sweating during exercise or being exposed to substances such as soap or detergent, which may get stuck on the other end of the product.

2. Do not wash the ring with a household cleanser. Please use soap less detergent, rinse thoroughly and wipe it with a piece of soft towel or napkin.

3. For spots or stains that are not easy to remove, scrub the area with rubbing alcohol and then follow the above procedures.

Safety Instructions

1. Although the Smart Ring can detect the real-time dynamic heart rate, it cannot be used for any medical purpose.

2. Do not place the equipment and its accessories in the area with too high or too low temperature, otherwise it may cause equipment failure, fire or explosion.

3. Avoid strong impact or vibration on the product to avoid damaging the equipment and its accessories and causing equipment failure.

4. Do not disassemble or modify the equipment and accessories without authorization. In case of equipment failure, please contact after sales service.

5. If the equipment is not used for a long time, be sure to make up the power every three months.

Thank You

Hi There

Thank you for choosing Pebble!

You are now the proud owner of Pebble Halo 2 Smart Ring

You can do a lot more with it, you have an Universe on your wrist.

This Pebble Halo 2 Smart Ring is a genuine high-quality

Pebble product that comes with a 1 Year Warranty

For Availing Warranty

Contact us at: <https://support.pebblecart.com/support/tickets/new> and Service Centres near you.

Call: +91 8800271651 or

Email: support@pebblecart.com

Scan & register your product for

1 Year Warranty