



pebble

Keeping Track of you.



QORE 2

WELLNESS BAND

Un-boxing the device

- Pebble Qore 2 Wellness Band
- Magnetic Charger
- User Manual


Specifications

Model Name	Pebble Qore 2
Model No.	PFB21
Standby Time	Up to 60 Days
Charging Type	Magnetic Charging
Strap Size	20mm
Bluetooth	V5.4



Charging


Fully charge the device (can take up to 3 hours) before using for the first time. To charge your device, plug the charging cable into the power adapter or USB port on your Device.

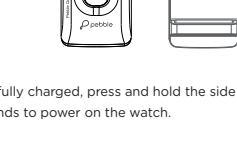



When fully charged, press and hold the side button for 3 seconds to power on the watch.

App Download

Open the Wellness Band app download interface, use the scan function to download, or scan the QR code attached to download from the Play Store/App Store

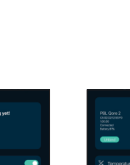

Connect

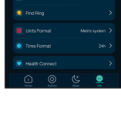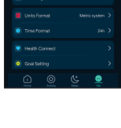

Pair the Wellness Band using our app on your phone.

Connection operation mode: Open App>>MyDevice>>Select the Wellness Band model and agree to the pairing request, then the connection is successful.

APP & Function Operation

After the device is activated, please pair it with the **app** for operation and use. After Bluetooth connection, press the button to display a green light. If the connection is not successful, press the button to display a red light.

Smart Notifications

Incoming Calls notifications with light and vibration

*Firmware Update (OTA)

The APP will remind you if a new firmware version has been released; if so, follow the steps to upgrade to the latest version.

*Restore factory settings

After resetting, all device data will be deleted. Please charge and reactivate.

Exercise


You can turn on the sports mode on the **APP**.

You can see more than 100 sports modes. GPS running can track movement trajectory and running records.



Me(My personal information)

Check basic APP settings: personal information, third-party access, login account management, app background, about us, feedback sup port, app version update, etc.



Maintenance

It is recommended to wear and maintain according to the following three points:

1. Keep the product clean
2. Keep the product dry
3. Please wear the product correctly

Safety Instructions

1. Although the Smart Band can detect real-time heart rate, it is not intended for medical use.
2. Do not place the device or its accessories in areas with extremely high or low temperatures, as this may cause failure, fire, or explosion.
3. Avoid strong impacts or vibrations to prevent damage.
4. Do not disassemble or modify the device or accessories without authorization. For issues, contact after-sales service.
5. If unused for a long time, recharge the device at least once every three months.

Thank You

Hi There

Thank you for choosing **Pebble!**

You are now the proud owner of **Pebble Qore 2** Wellness Band

You can do a lot more with it, you have an Universe on you wrist.

This **Pebble Qore 2** is a genuine high-quality **Pebble** product that comes with a **1 Year Warranty**

For Availing Warranty

Contact us at- <https://support.pebblecart.com/support/tickets/new>

and Service Centres near you

Call on +91 8800271651 or

email at support@pebblecart.com



Scan & register your product for 1 Year Warranty