


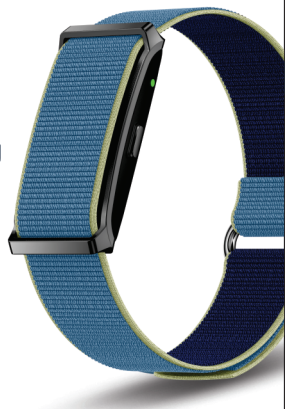

Keeping  
Track of  
you.

**Qore**  
WELLNESS BAND



## User Manual

### Un-boxing the device

- Pebble Qore Wellness Band
- Magnetic Charger
- User Manual


### Specifications

Model No PFB94  
Model Name Pebble Qore  
Standby Time Up to 60 Days  
Charging Type Magnetic Charging  
Bluetooth V5.2  
Water Resistant IATM



### Charging

Fully charge the device (this may take up to 3 hours) before using it for the first time. To charge your device, plug the charging cable into a power adapter or a USB port on your device.

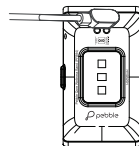


When fully charged, press and hold the side button for 3 seconds to power on the watch.

### App Download

Open the band's app download interface, or scan the QR code provided to download the QWatch Pro app from the Play Store or App Store.



### Connect

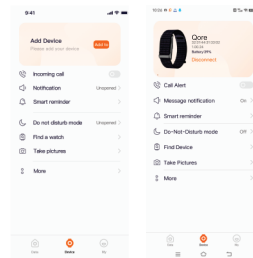

## APP & Function Operation

After the device is activated, please pair it with the **QWatch Pro** app for operation and use. After Bluetooth connection, press the button to display a green light. If the connection is not successful, press the button to display a red light.

### Smart Notifications

Different social notifications and their light and vibration

### Prompts are as Follows:

Green light flashing vibration frequency	Signal	Is Bluetooth connective on required?
Once per second	Incoming calls	Yes
Once	SMS and third-party app notifications	Yes
Three Times	Sedentary Reminder	Yes
Thirty Times	Alarm Clock	Yes

**Note:** Press the home key once to stop above notifications, and press the home key twice to remote the software to take pictures.

### \*Firmware Update (OTA)

The APP will remind you if a new firmware version has been

released; if so, follow the steps to upgrade to the latest version.

### \*Restore factory settings

After resetting, all device data will be deleted. Please charge and reactivate.

### Exercise

You can turn on the sports mode on the **QWatch Pro APP**

You can see more than 100 sports modes. GPS running can track movement trajectory and running records.



### Me(My personal information)

Check basic APP settings: personal information, third-party access, login account management, app background, about us, feedback support, app version update, etc.



### Maintenance

It is recommended to wear and maintain according to the following three points:

1. Keep the product clean
2. Keep the product dry
3. Please wear the product correctly

### Safety Instructions

1. Although the Smart Band can detect real-time heart rate, it is not intended for medical use.
2. Do not place the device or its accessories in areas with extremely high or low temperatures, as this may cause failure, fire, or explosion.
3. Avoid strong impacts or vibrations to prevent damage.
4. Do not disassemble or modify the device or accessories without authorization. For issues, contact after-sales service.
5. If unused for a long time, recharge the device at least once every three months.

## Thank You

Hi There

Thank you for choosing **Pebble**!

You are now the proud owner of **Pebble Qore Wellness Band**

You can do a lot more with it, you have an Universe on your wrist.

This **Pebble Qore** is a genuine high-quality **Pebble** product that comes with a **1 Year Warranty**

### For Availing Warranty

- Contact us at- <https://www.pebblecart.com/pages/raise-a-complaint> and Retail Outlets near you
- Call on +91 8800271651 or email at support@pebblecart.com



Scan & register your product for  
**1 Year Warranty**