



pebble



Seeq Smart Glasses



Integrated AI Assistant

Say "Hey Seeq"


Un-boxing the device

- Pebble Seeq Smart Glasses
- Lens Cloth
- Charging Cable
- Warranty Card

Specifications

Model Name	Pebble Seeq
Model No.	PWFH03
Play Time	Up to 6 Hours
Standby Time	Up to 15 Days
Charging Type	Magnetic Charger
Bluetooth	V5.4

How to Operate

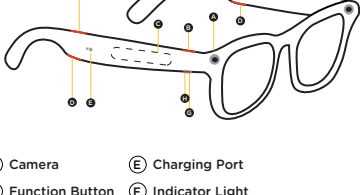

- | | |
|---------------------|---------------------|
| (A) Camera | (E) Charging Port |
| (B) Function Button | (F) Indicator Light |
| (C) Trackpad | (G) Microphone |
| (D) Speaker | (H) Status light |

Power On/Off


Power On: Press and hold the right physical button for 2 seconds

Power Off: Press and hold the right physical button for 5 seconds

(**Note:** The device will automatically shut down after 5 minutes without connection. If connection fails, restarting is recommended.)

App Download

Open the Smart Glasses app download interface, use the scan function to download, or scan the QR code attached to download from the Play Store/App Store

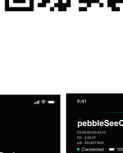

Connect



Pair the smart glasses using our app on your phone.

Connection operation mode: Open the app > My Device > Select the smart glasses model and agree to the pairing request. The device will then connect successfully.

Music

Play/Pause: Double-tap the touch control area

Track Switching: Press and hold the touch control area for 2 seconds to switch to the next track; triple-tap to switch to the previous track.

Photo/Video/Audio

Take Photo: Press the right physical button once.

Record Video: Press the right physical button twice. (when not in a call or playback.)

End Video: Press the right physical button once during recording.

Start Audio Recording: Press the left physical button twice. (when not in a call or playback.)

End Recording: Press the left physical button once during recording.

(**Note:** 1. Photos, videos, and audio recordings can be uploaded within the app. To ensure stable Wi-Fi uploads, it is recommended to connect the device to a charger before uploading.

2. To protect public privacy, an indicator light will turn on as a reminder when taking photos, recording videos, or capturing audio.)

AI Wake-Up

Voice Assistant: Press the left physical button once

Calls

Answer/End Call: Press the left/right physical button once

Reject Call: Press and hold the left/right physical button for 2 seconds

Glasses Charging

Magnetic Charging: Red light stays on while charging, and a solid blue light indicates full charge.

Factory Reset

Factory Reset: Press and hold the right physical button for 10 seconds.

(**Note:** Restores default settings and erases all data on the glasses.)

Clear Pairing Information

Clear Pairing Information: Press and hold the left physical button for 5 seconds.

(**Note:** Clears pairing information of connected devices.)

Safety Instructions

1. The smart glasses camera is intended for personal use only. Always respect privacy and local laws when capturing photos or videos.
2. Do not expose the device or its accessories to extremely high or low temperatures, as this may result in malfunction, fire hazards, or damage.
3. Avoid dropping, bending, or subjecting the glasses to strong impacts or vibrations to prevent damage to internal components, including the camera.
4. Do not disassemble, modify, or attempt to repair the device or its accessories without authorization. For any issues, please contact authorized after-sales service.
5. Keep the camera lens clean and avoid touching it directly to maintain image quality.

Thank You

Hi There

Thank you for choosing **Pebble**!

You are now the proud owner of **Pebble Seeq** Smart Glasses

You can do a lot more with it, designed to make everyday moments smarter.

This **Pebble Seeq** Smart Glasses is a genuine high-quality **Pebble** product that comes with a **1 Year Warranty**.

For Availing Warranty

Contact us at- <https://support.pebblecart.com/support/tickets/new> and Service Centres near you

Call on +91 8800271651 or email at support@pebblecart.com



Scan & register your product for 1 Year Warranty